


# Reihenfolge Ein- und Ausschalen von Rahmenschalungen




94400-100



94400-101

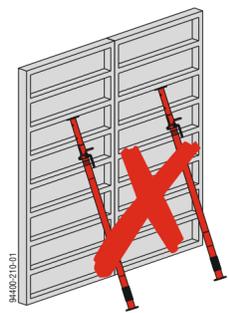

94400-210-01

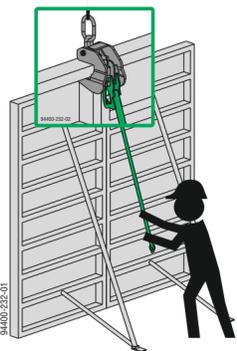


94400-252-01




[www.doka.com/downloadcenter](http://www.doka.com/downloadcenter)

## Einschalen

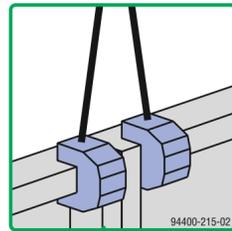


94400-215-02

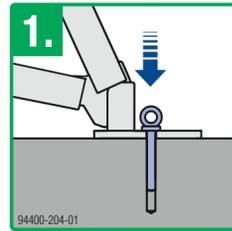


1.

94400-204-01

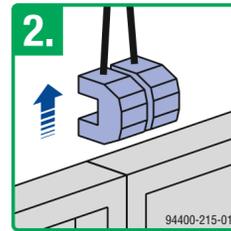


2.


94400-215-01

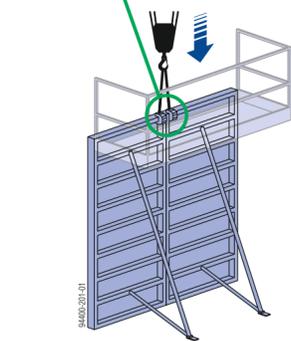


94400-201-01

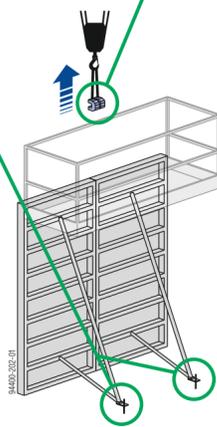

94400-202-01

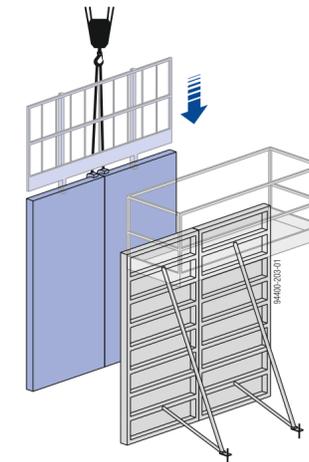


94400-203-01

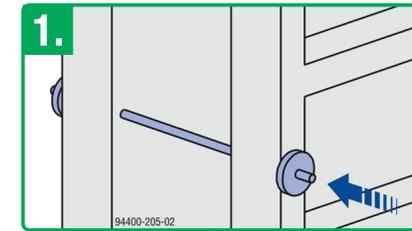


1.

94400-205-02

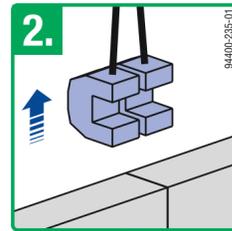


2.

94400-235-01

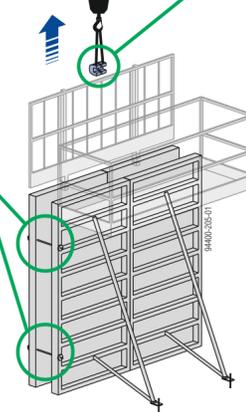


## Ausschalen

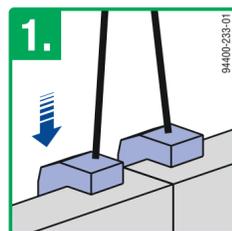


1.

94400-233-01

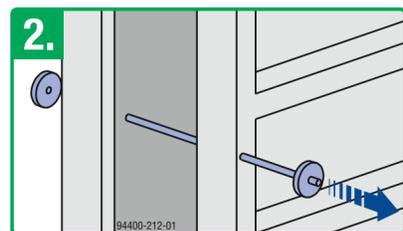


2.


94400-212-01

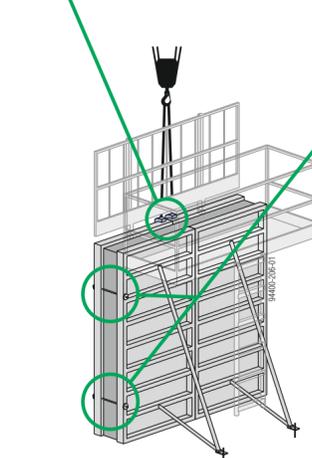

94400-204-01

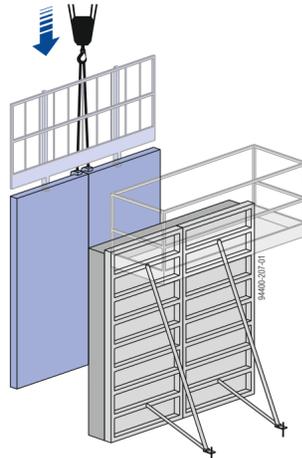


94400-201-01

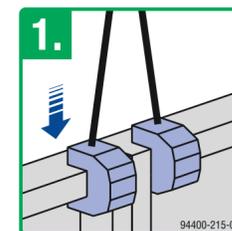


1.

94400-215-02

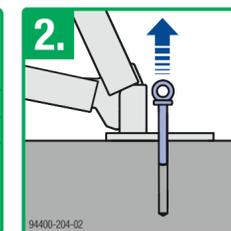


2.

94400-204-02

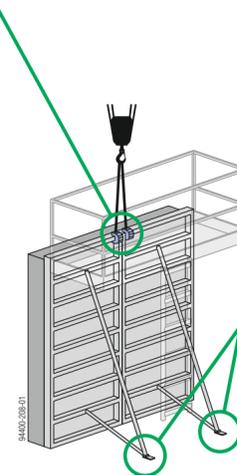

94400-206-01

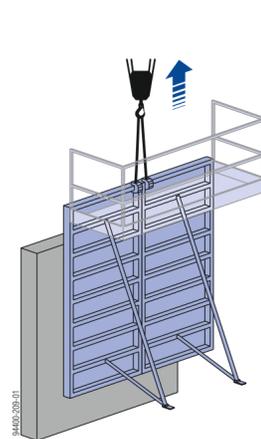

94400-209-01

# Reihenfolge Ein- und Ausschalen von Rahmenschalungen




94400-100



94400-101



94400-210-01












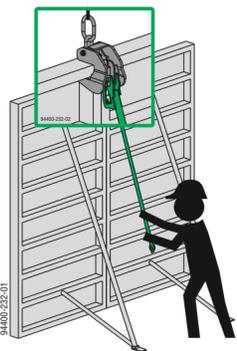


94400-226-01



[www.doka.com/downloadcenter](http://www.doka.com/downloadcenter)

## Umsetzen der Stellschalung

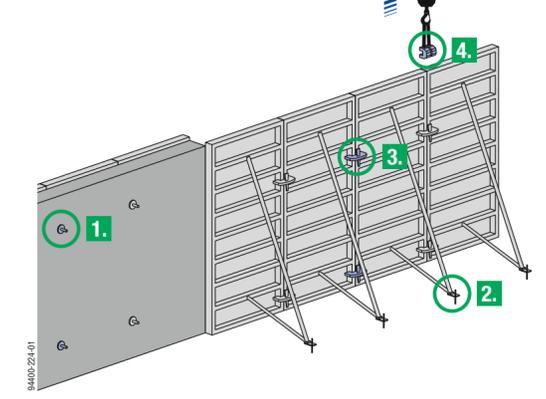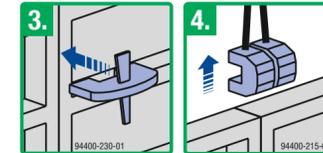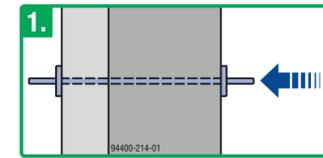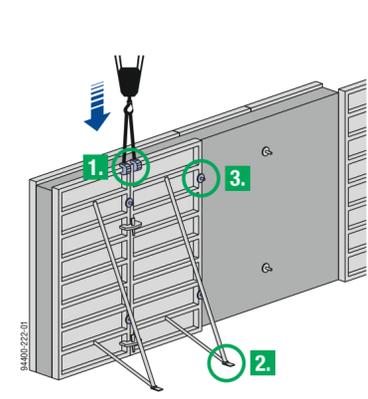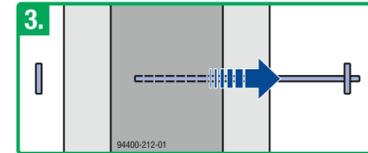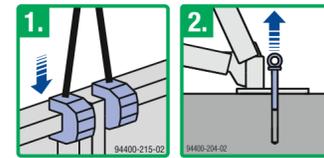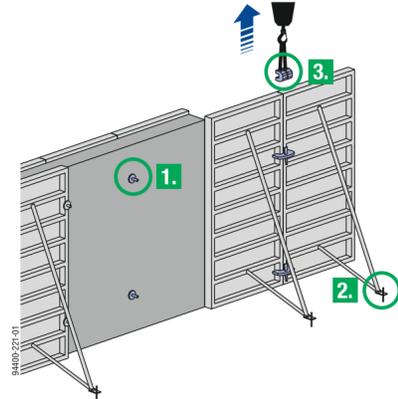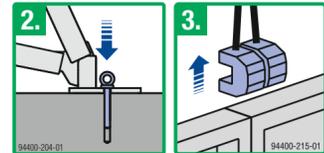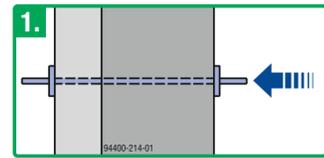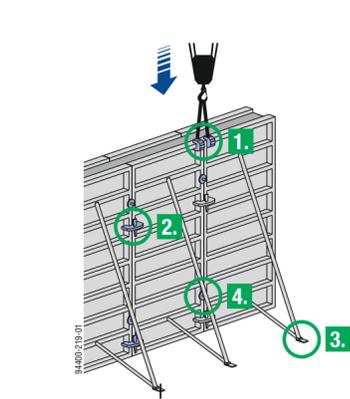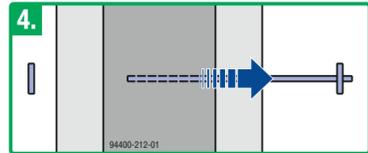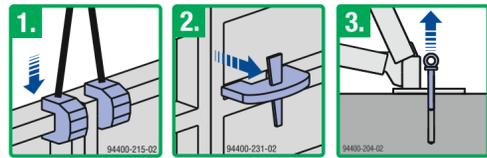

## Umsetzen der Gegenschalung

